

FLANGE MOUNT KIT FOR PANEL AND TROFFER


SPECS AND INSTALLATION INSTRUCTION

Models: MSFMK-14, MSFMK-22, MSFMK-24

DESCRIPTION



Nominal sheet rock cut-out opening is: 1x4: 13" x 48 5/8"; 2x2: 24 3/4" x 24 5/8"; 2x4: 24 3/4" x 48 5/8".

OVERALL DIMENSIONS			
Series	Length	Width	Height
MSFMK-14	48.26"(1226mm)	13.66"(347mm)	1.57"(40mm)
MSFMK-22	25.47"(647mm)	24.37"(619mm)	1.57"(40mm)
MSFMK-24	48.26"(1226mm)	25.47"(647mm)	1.57"(40mm)

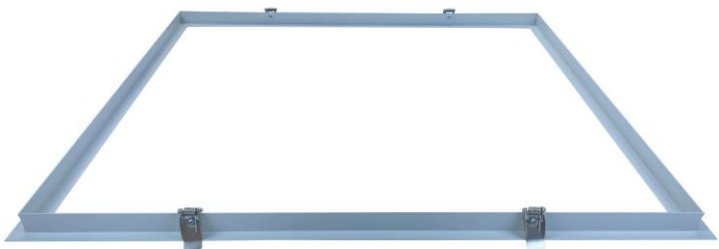

- RAB fixtures must be wired in accordance with the National Electrical Code and all applicable local codes. Proper grounding is required for safety;
- This product must be installed in accordance with the applicable installation code by person familiar with the construction and operation of the product and the hazards involved;
- Make certain power is OFF before installing the fixture. No user serviceable parts inside;
- Risk of fire or electric shock. Suitable for damp locations.;
- Install FMK Kit & Panel/Troffer per local codes;
- Suitable for installation in Sheet Rock/ Plasterboard in both Insulated Ceilings and Non-Insulated Ceilings
- Not for continuous row mounting;
- Do not handle energized fixture when hands are wet, when standing on wet or damp surfaces, or in water;
- Vapor barrier must be suitable for 90° C;
- FMK Kit to be independently supported to building structure.

WHAT'S IN THE BOX

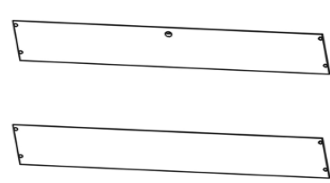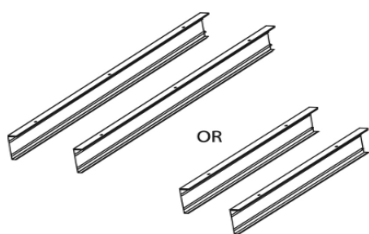
			
Two (2) End Pieces	Two (2) Side Pieces		
		1'x4', 2'x4'	12pcs
		2'x2'	6pcs
Eight (8) Assembly Screws	Surface Assembly Parts		

TOOLS & MATERIALS NEEDED

This FMK kit requires very few tools for installation. A screwdriver and appropriate fasteners for FMK kit.



CHANNEL STRUCTURE

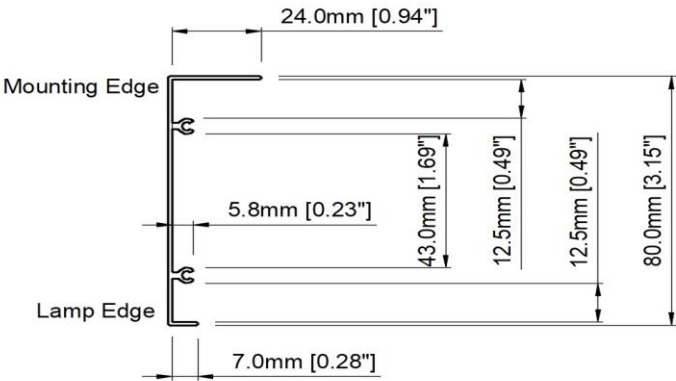

INSTALLATION

① Preparation of location

- Turn off the power, Identify and prepare location for installation;
- Unpack the frame package and inspect product that is in good condition without defects due to shipping.

② Assembly of kit

- Assemble the four pieces of the FMK Kit with the screws provided as shown in Fig 1

③ Installation of kit

- Flex the Spring Clips (4) up on one side of FMK Kit and insert it into ceiling. Once one side is in repeat on the opposite side to fully install into the ceiling.

④ Installation of fixture

- Preparing the panels or troffers;
- Follow wiring directions in the Specs to complete electrical splices.
- Rotate and slide the Fixture as required to fit through the drywall opening as indicated by the directional arrow in Fig 3 and place it on the FMK Kit.

⑤ Completion of Installation

- Power on and verify the fixture works right.

